



A

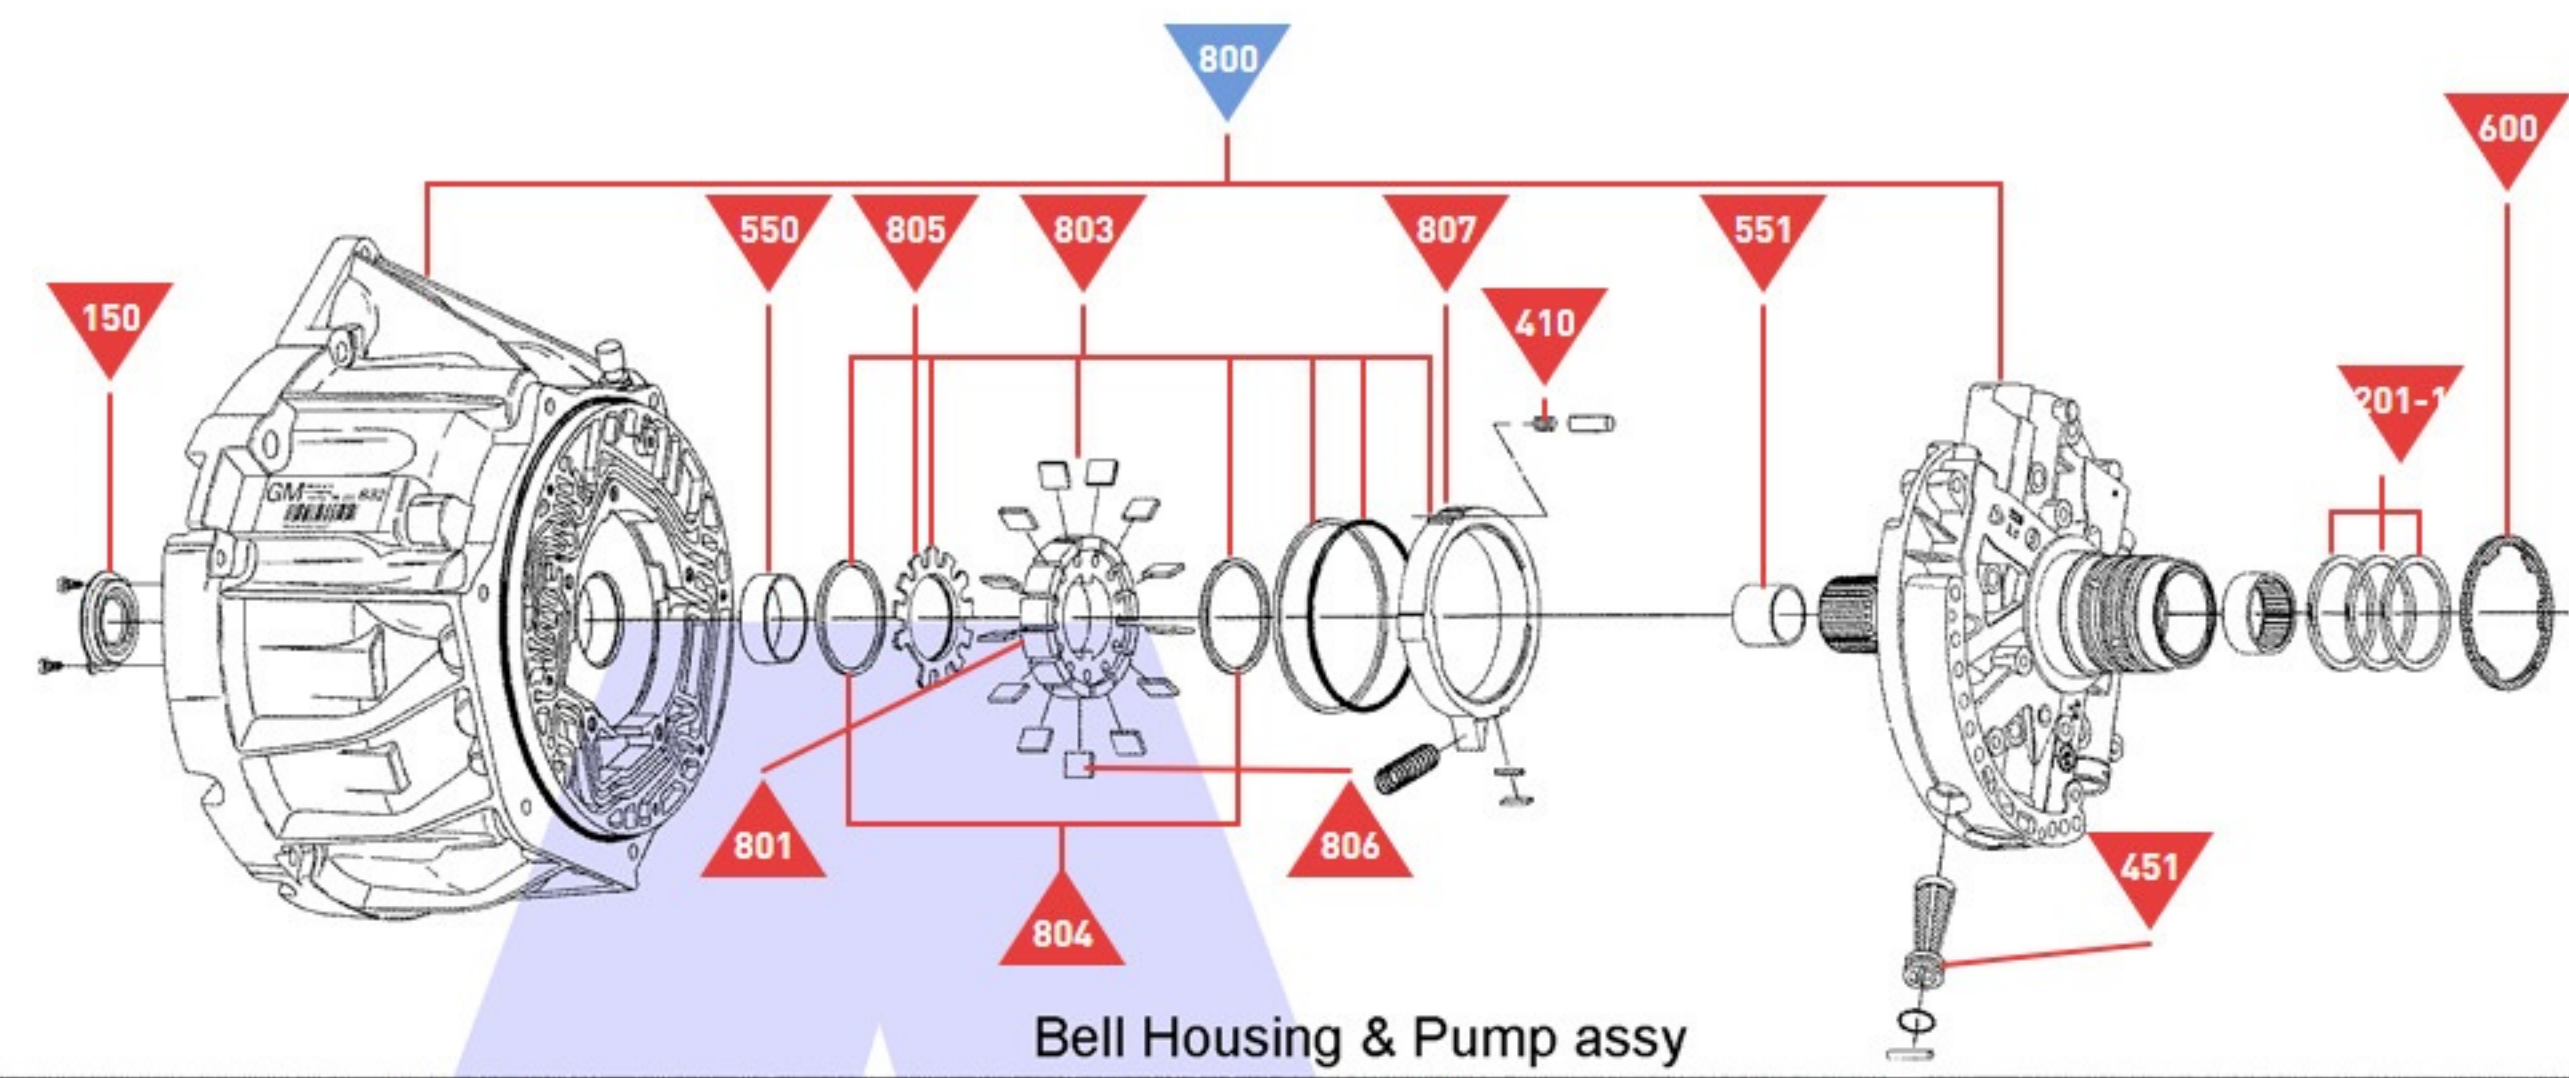

Bell Housing & Pump assy


B

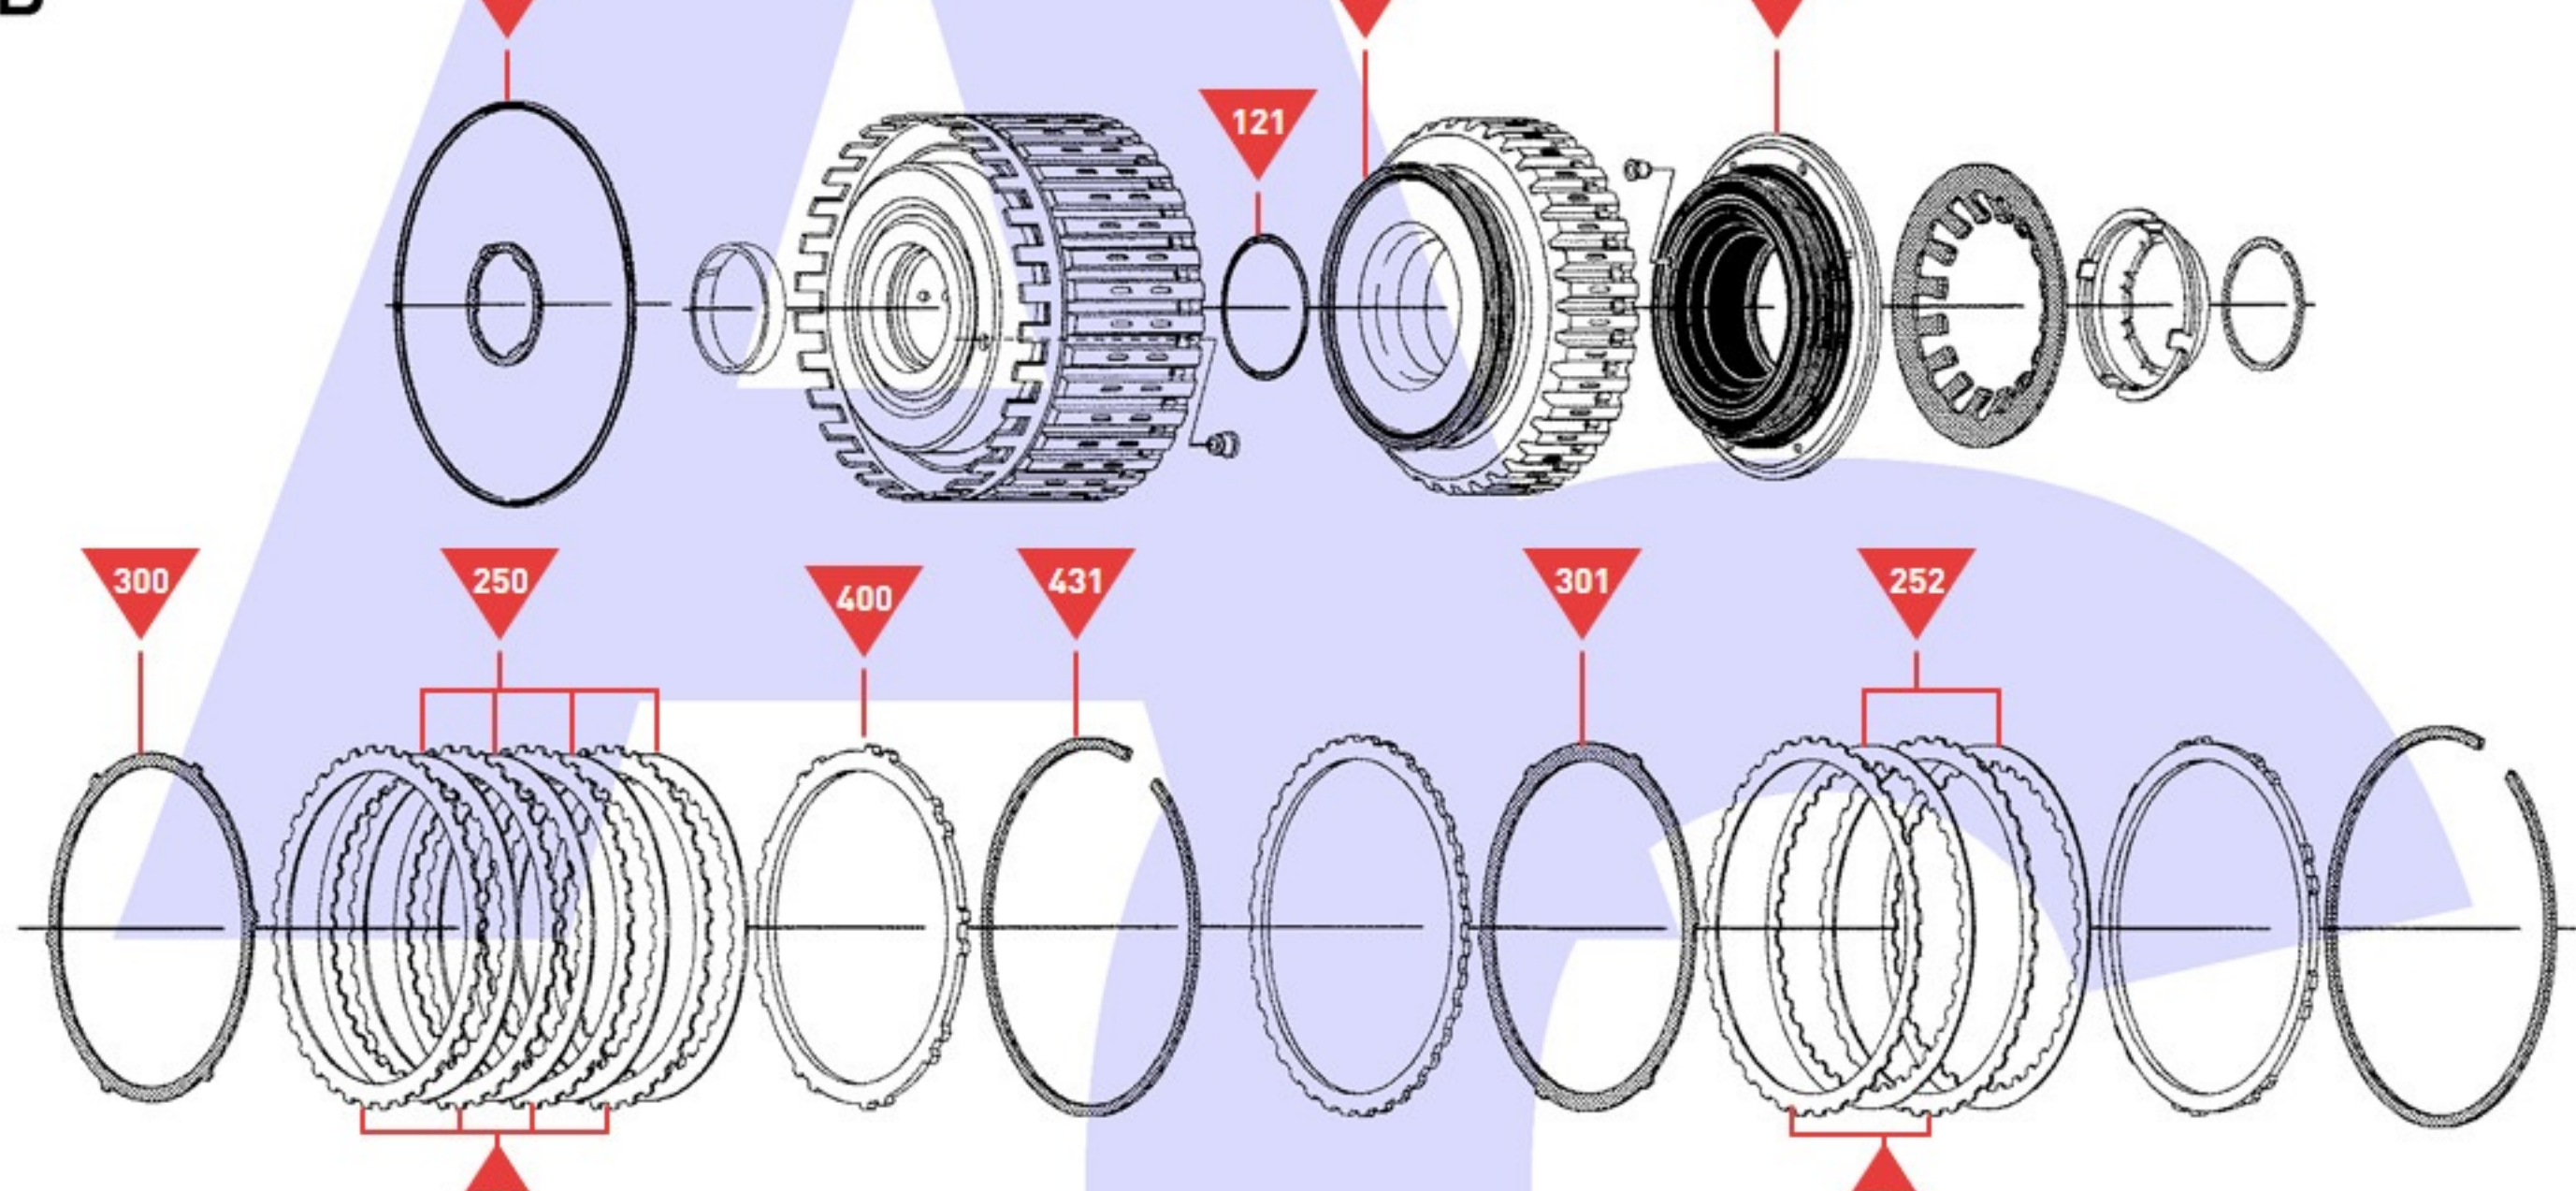

Direct Clutch Assy

Reverse Clutch Assy


C

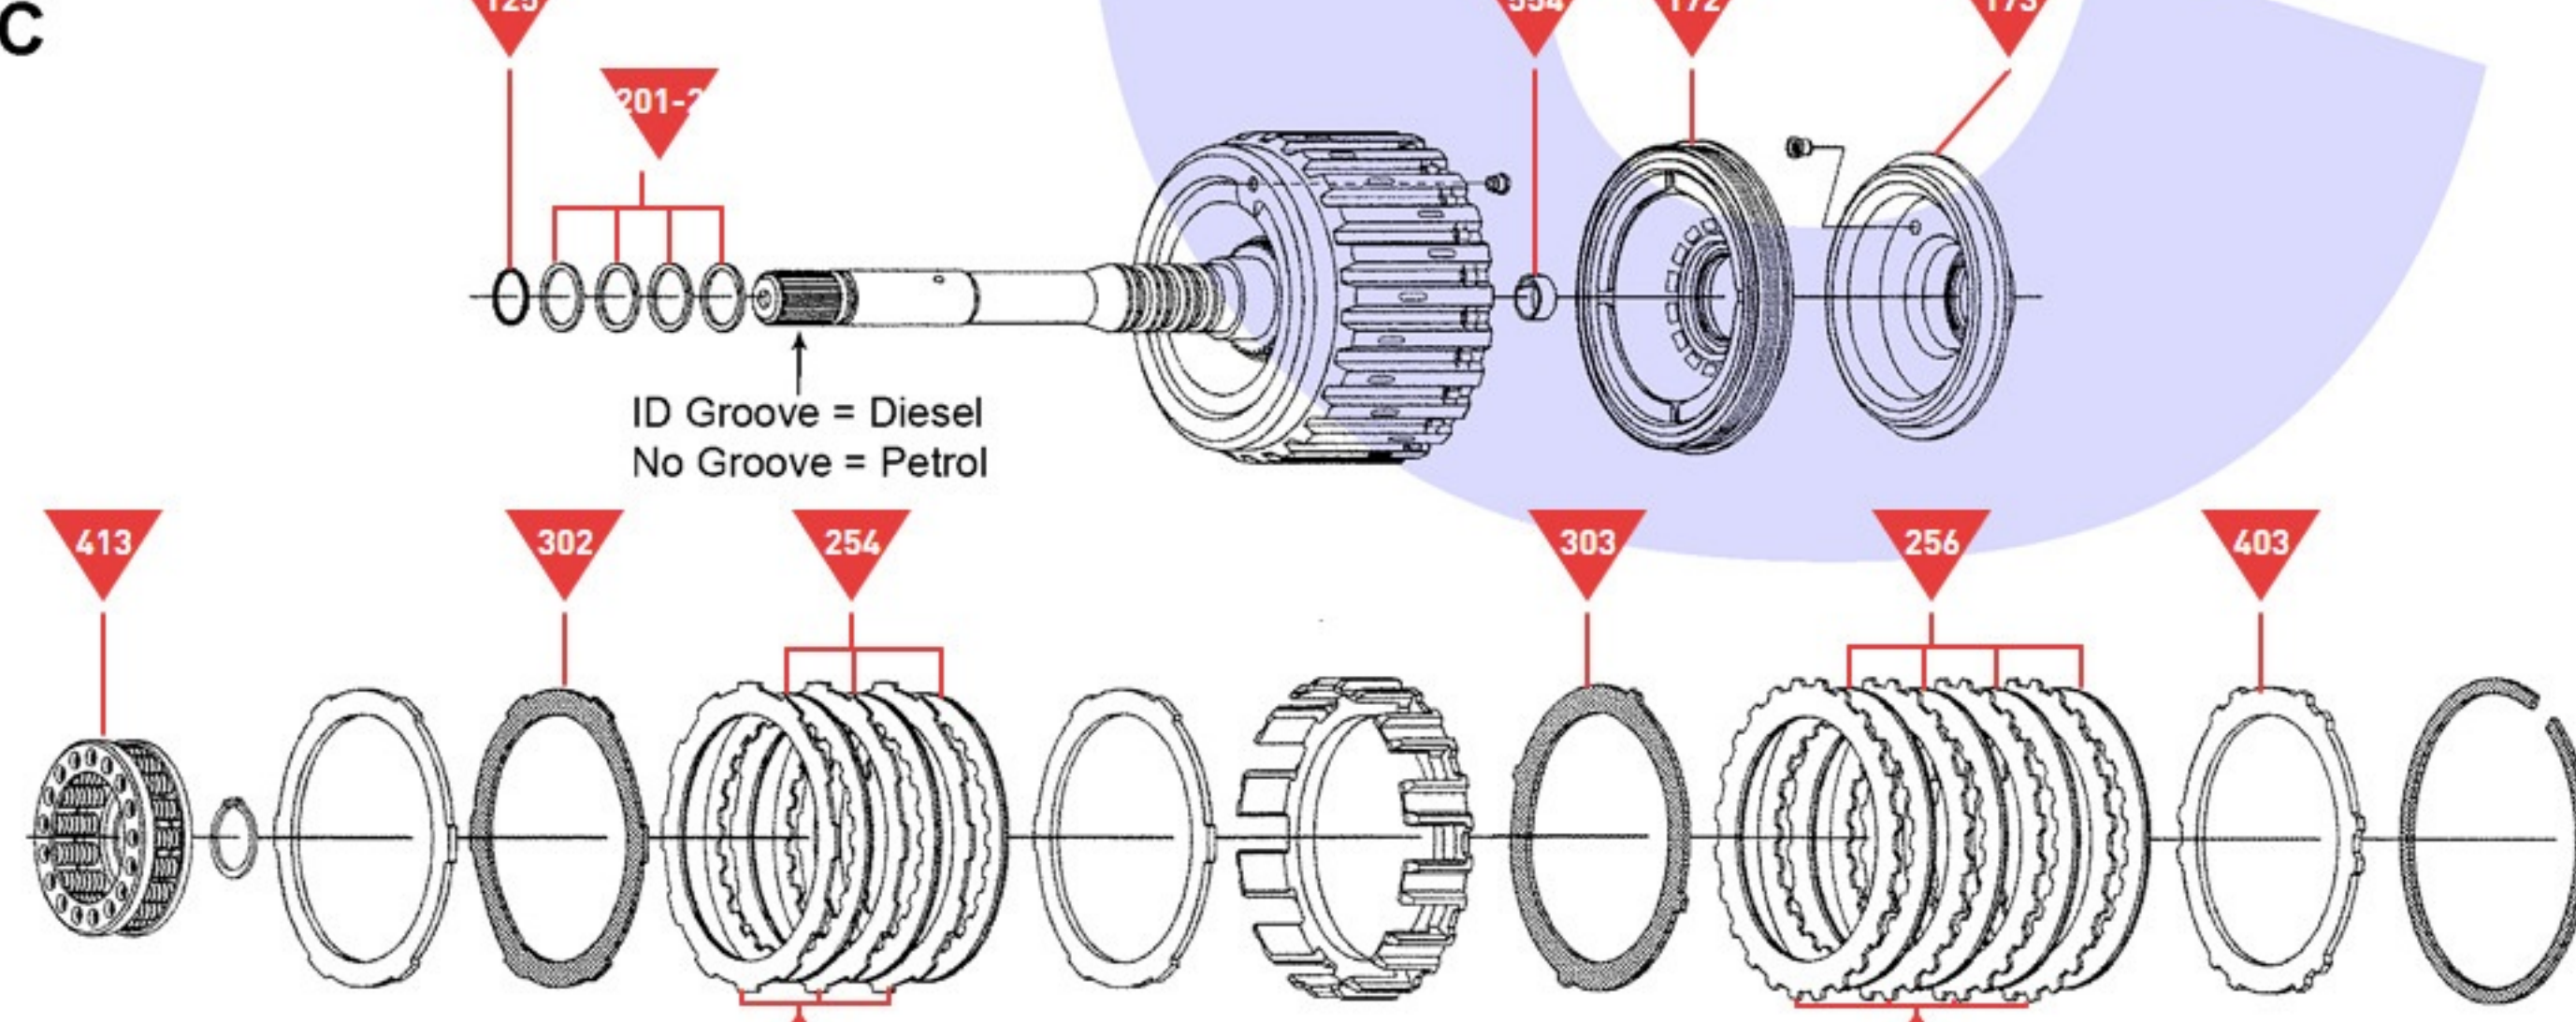

Coast Clutch Assy


Forward Clutch Assy

D

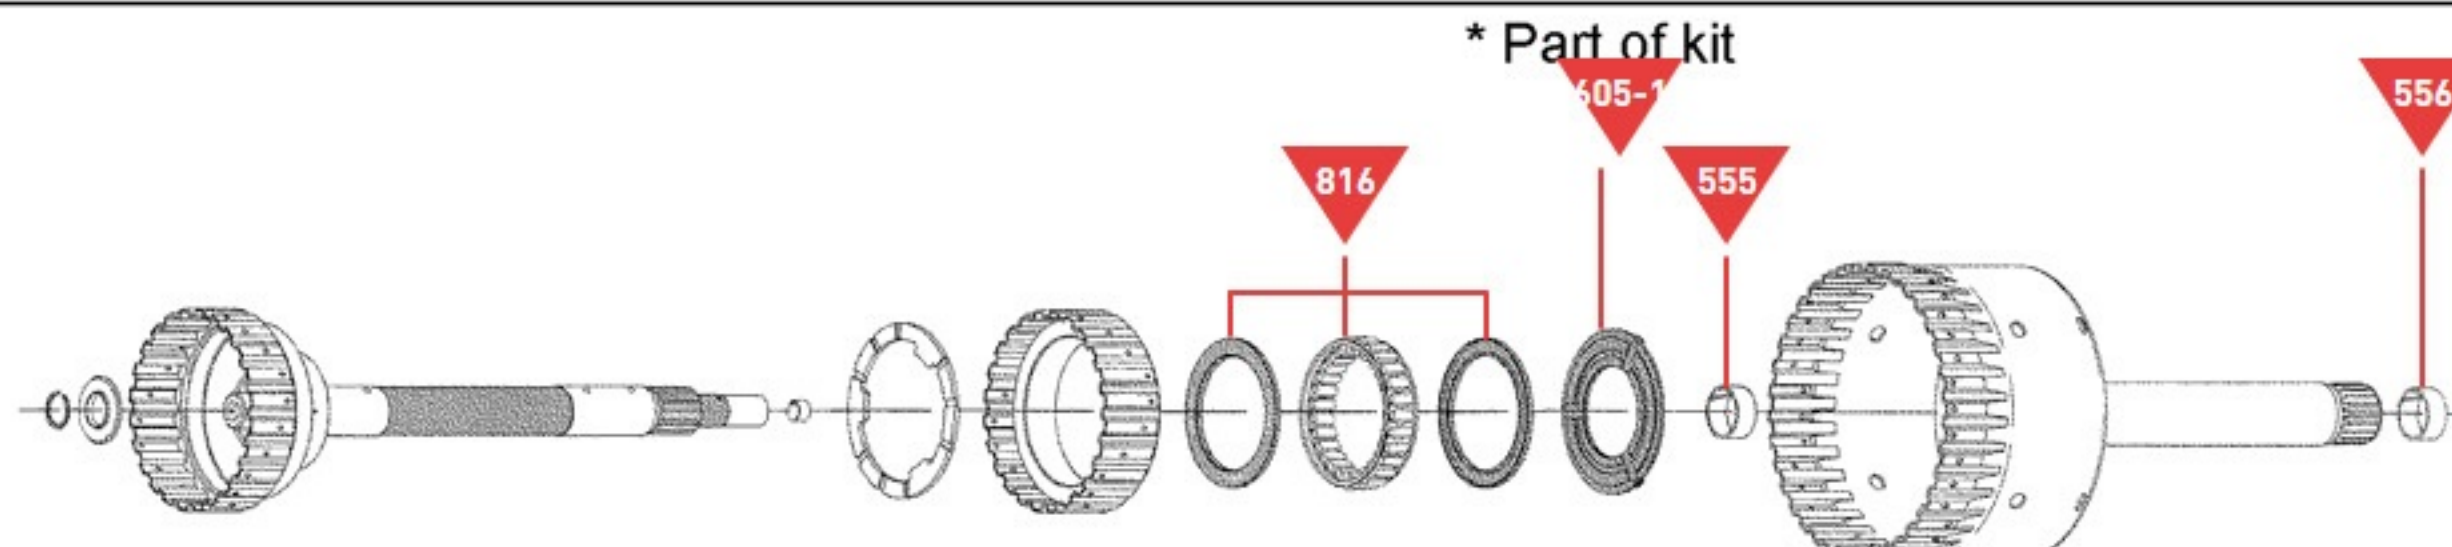


Forward Sprag, Direct Drum & Shaft Assy

E

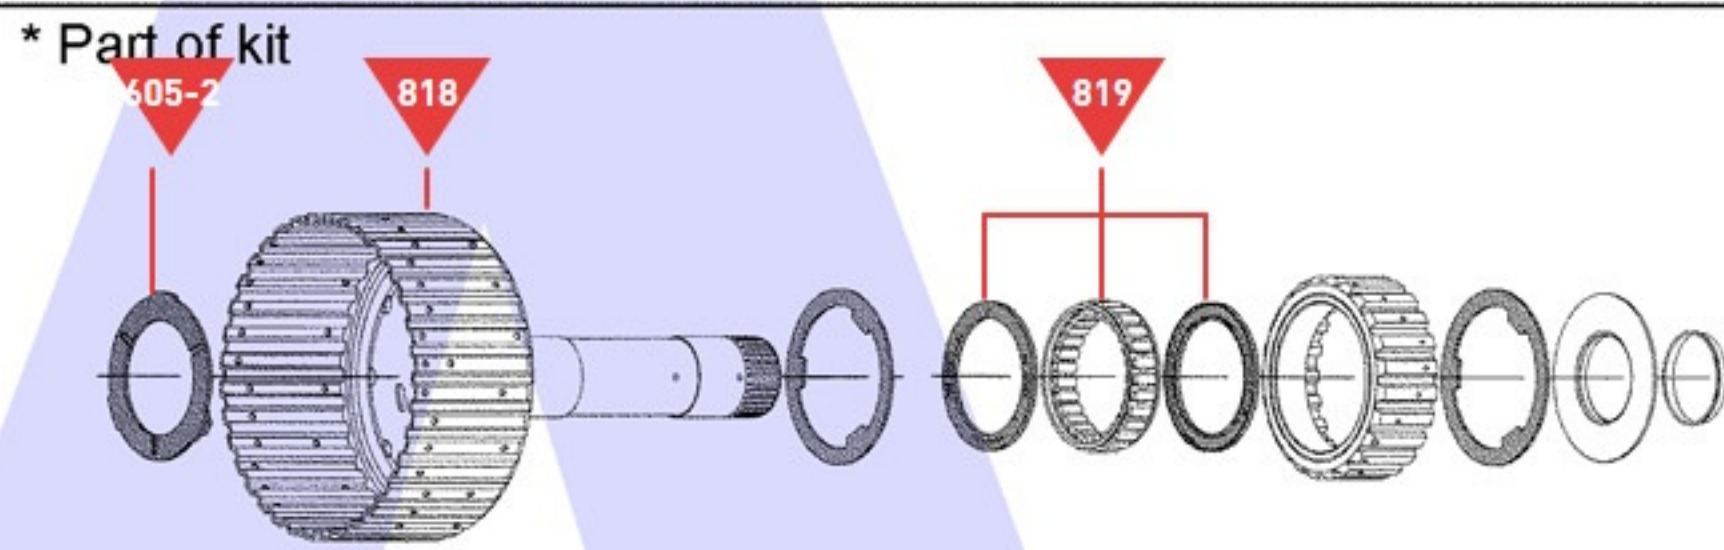

Overdrive Clutch Hub & Intermediate Sprag Assy


F

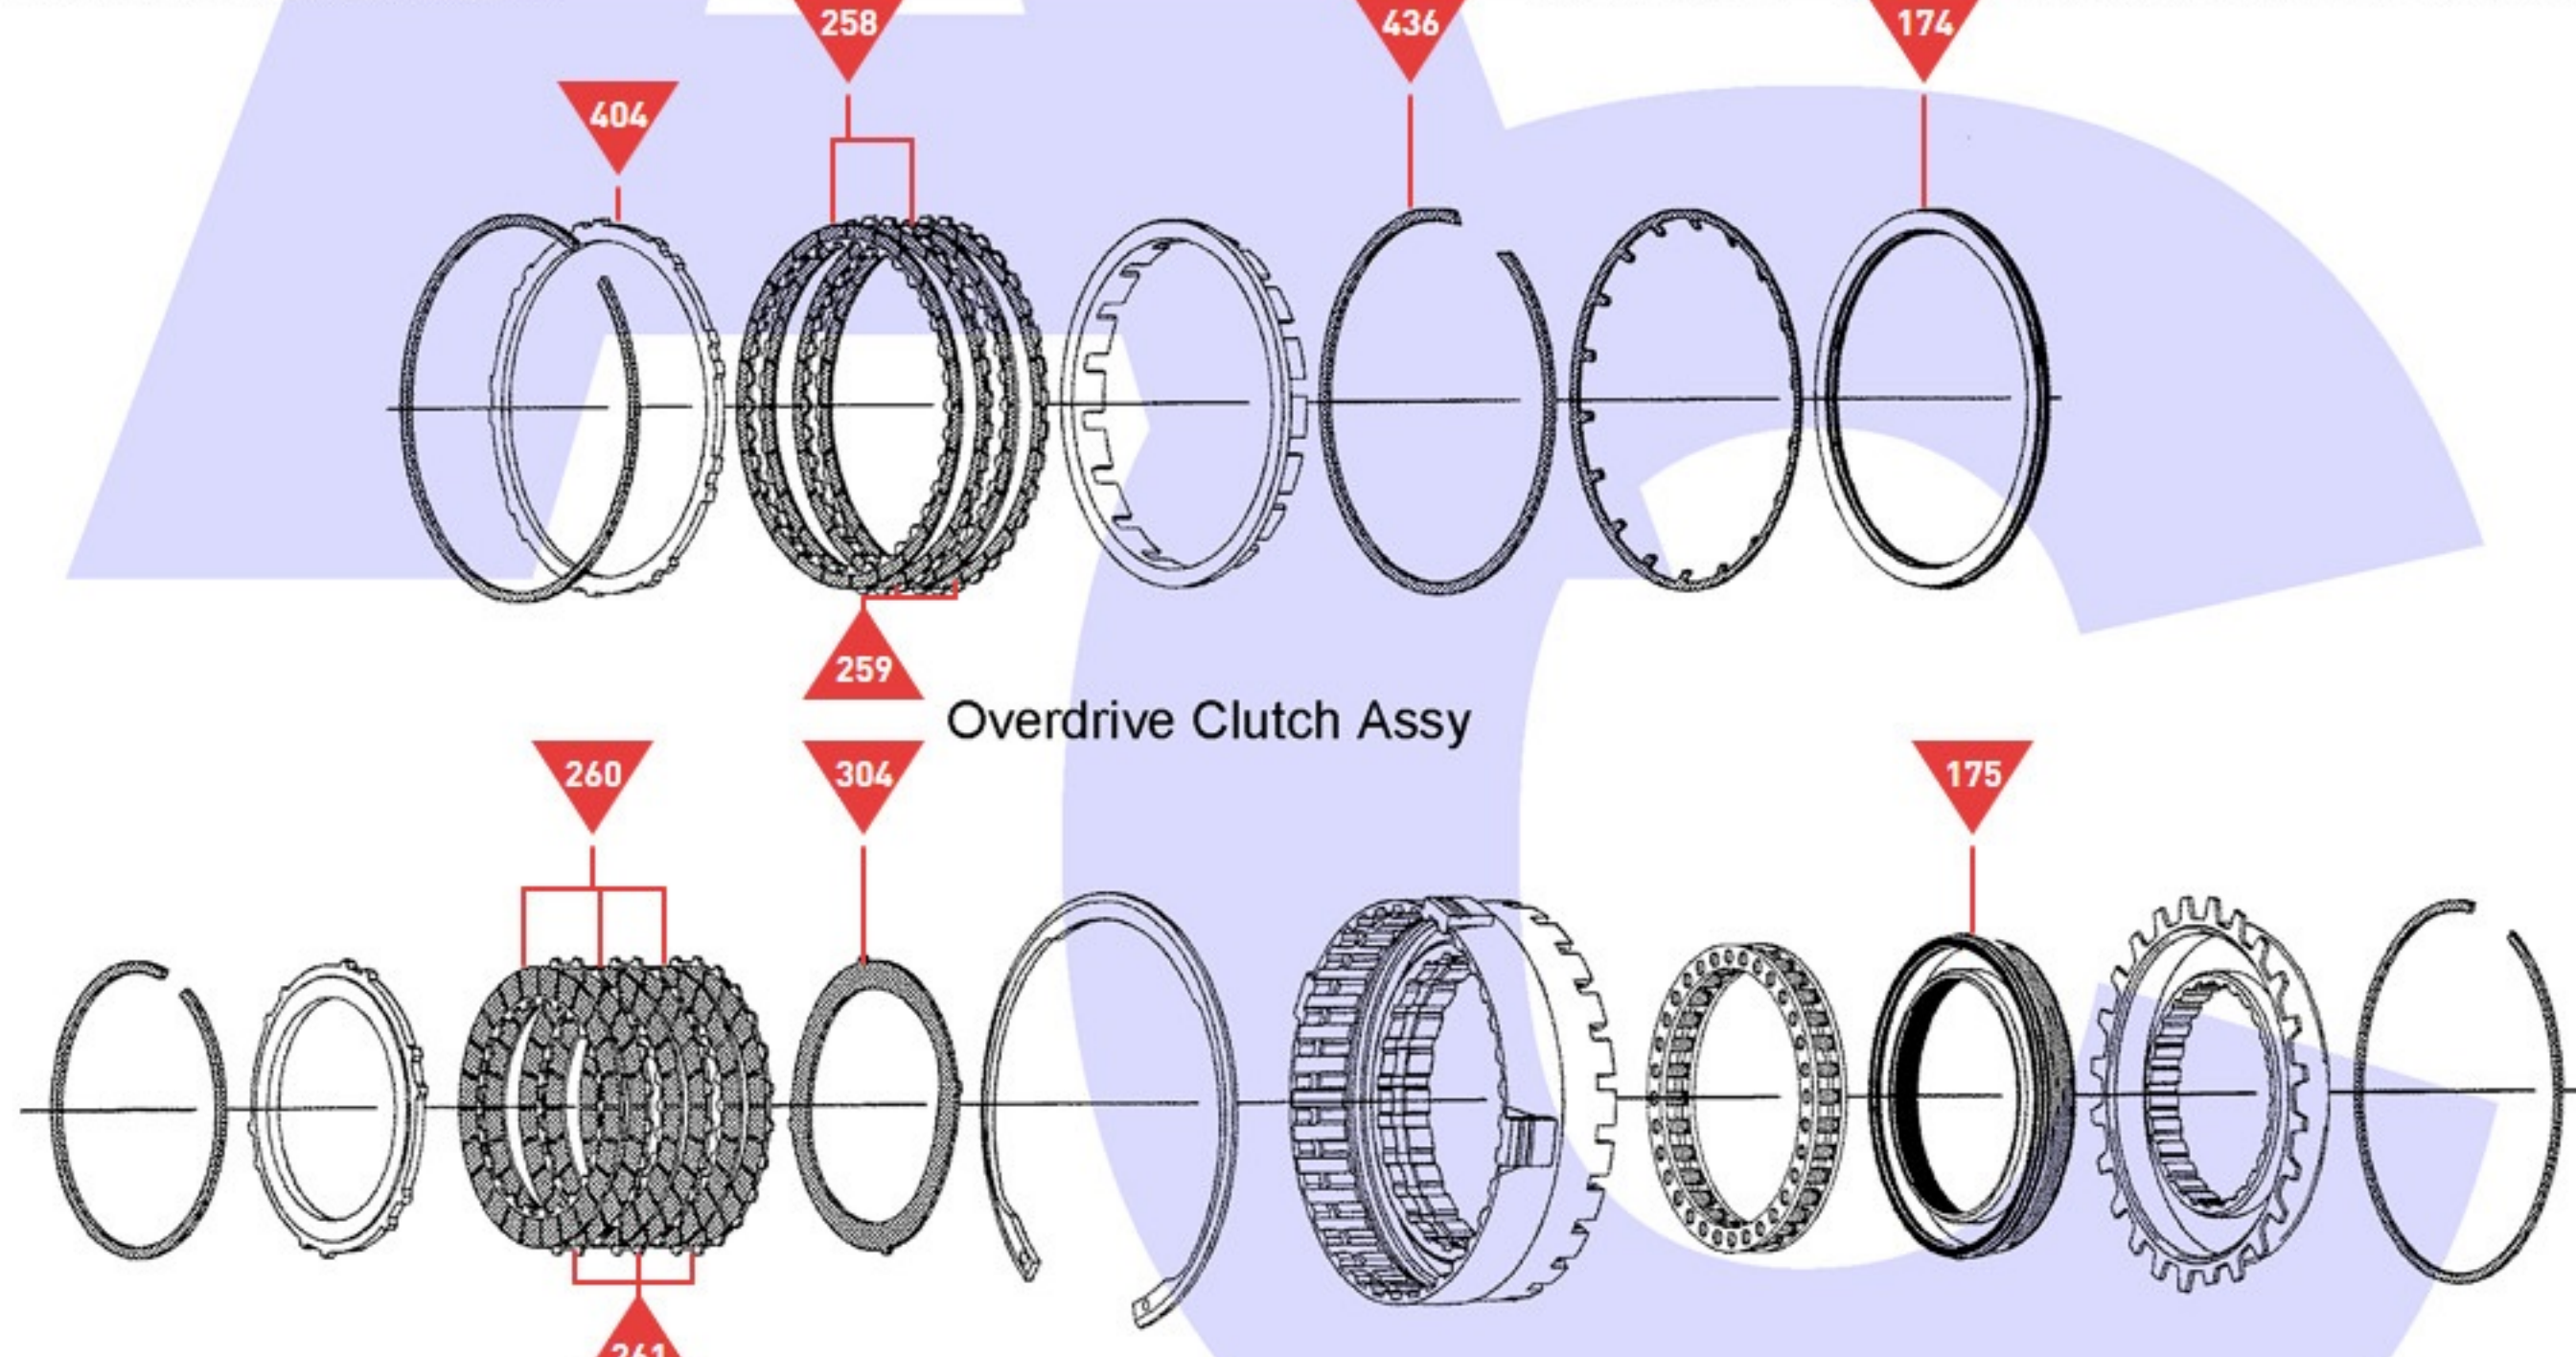

Overdrive Clutch Assy


Intermediate Clutch Assy

G

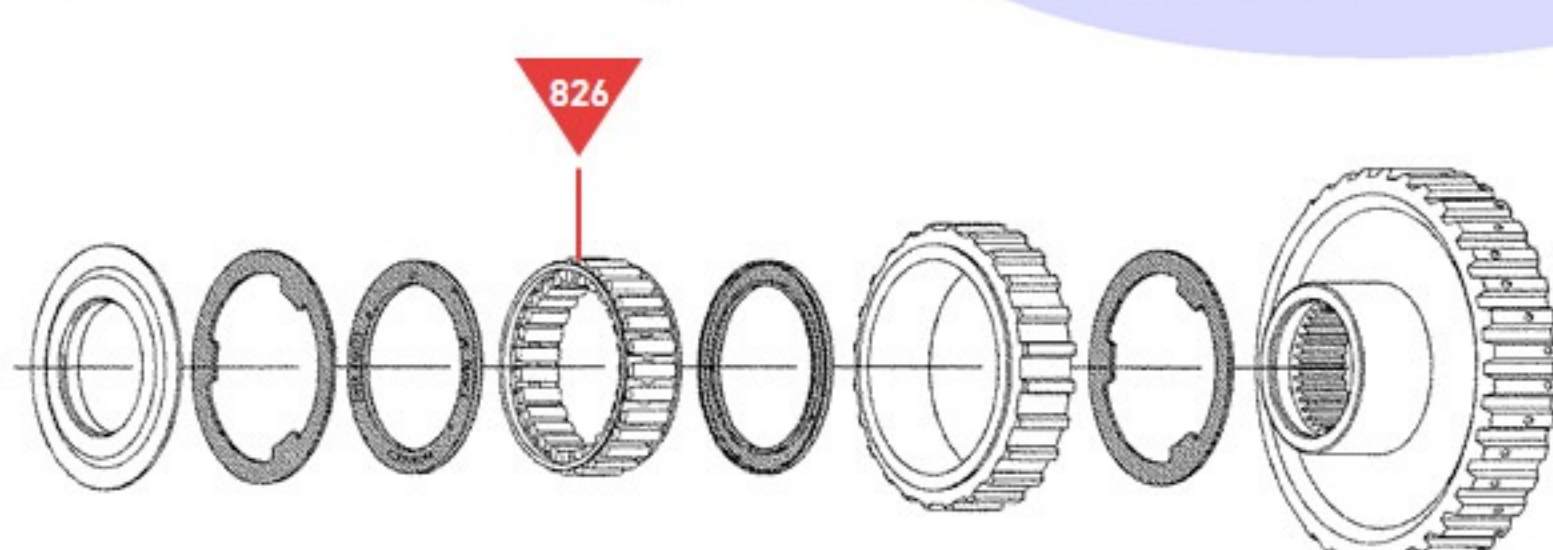

Low Sprag Assy

H

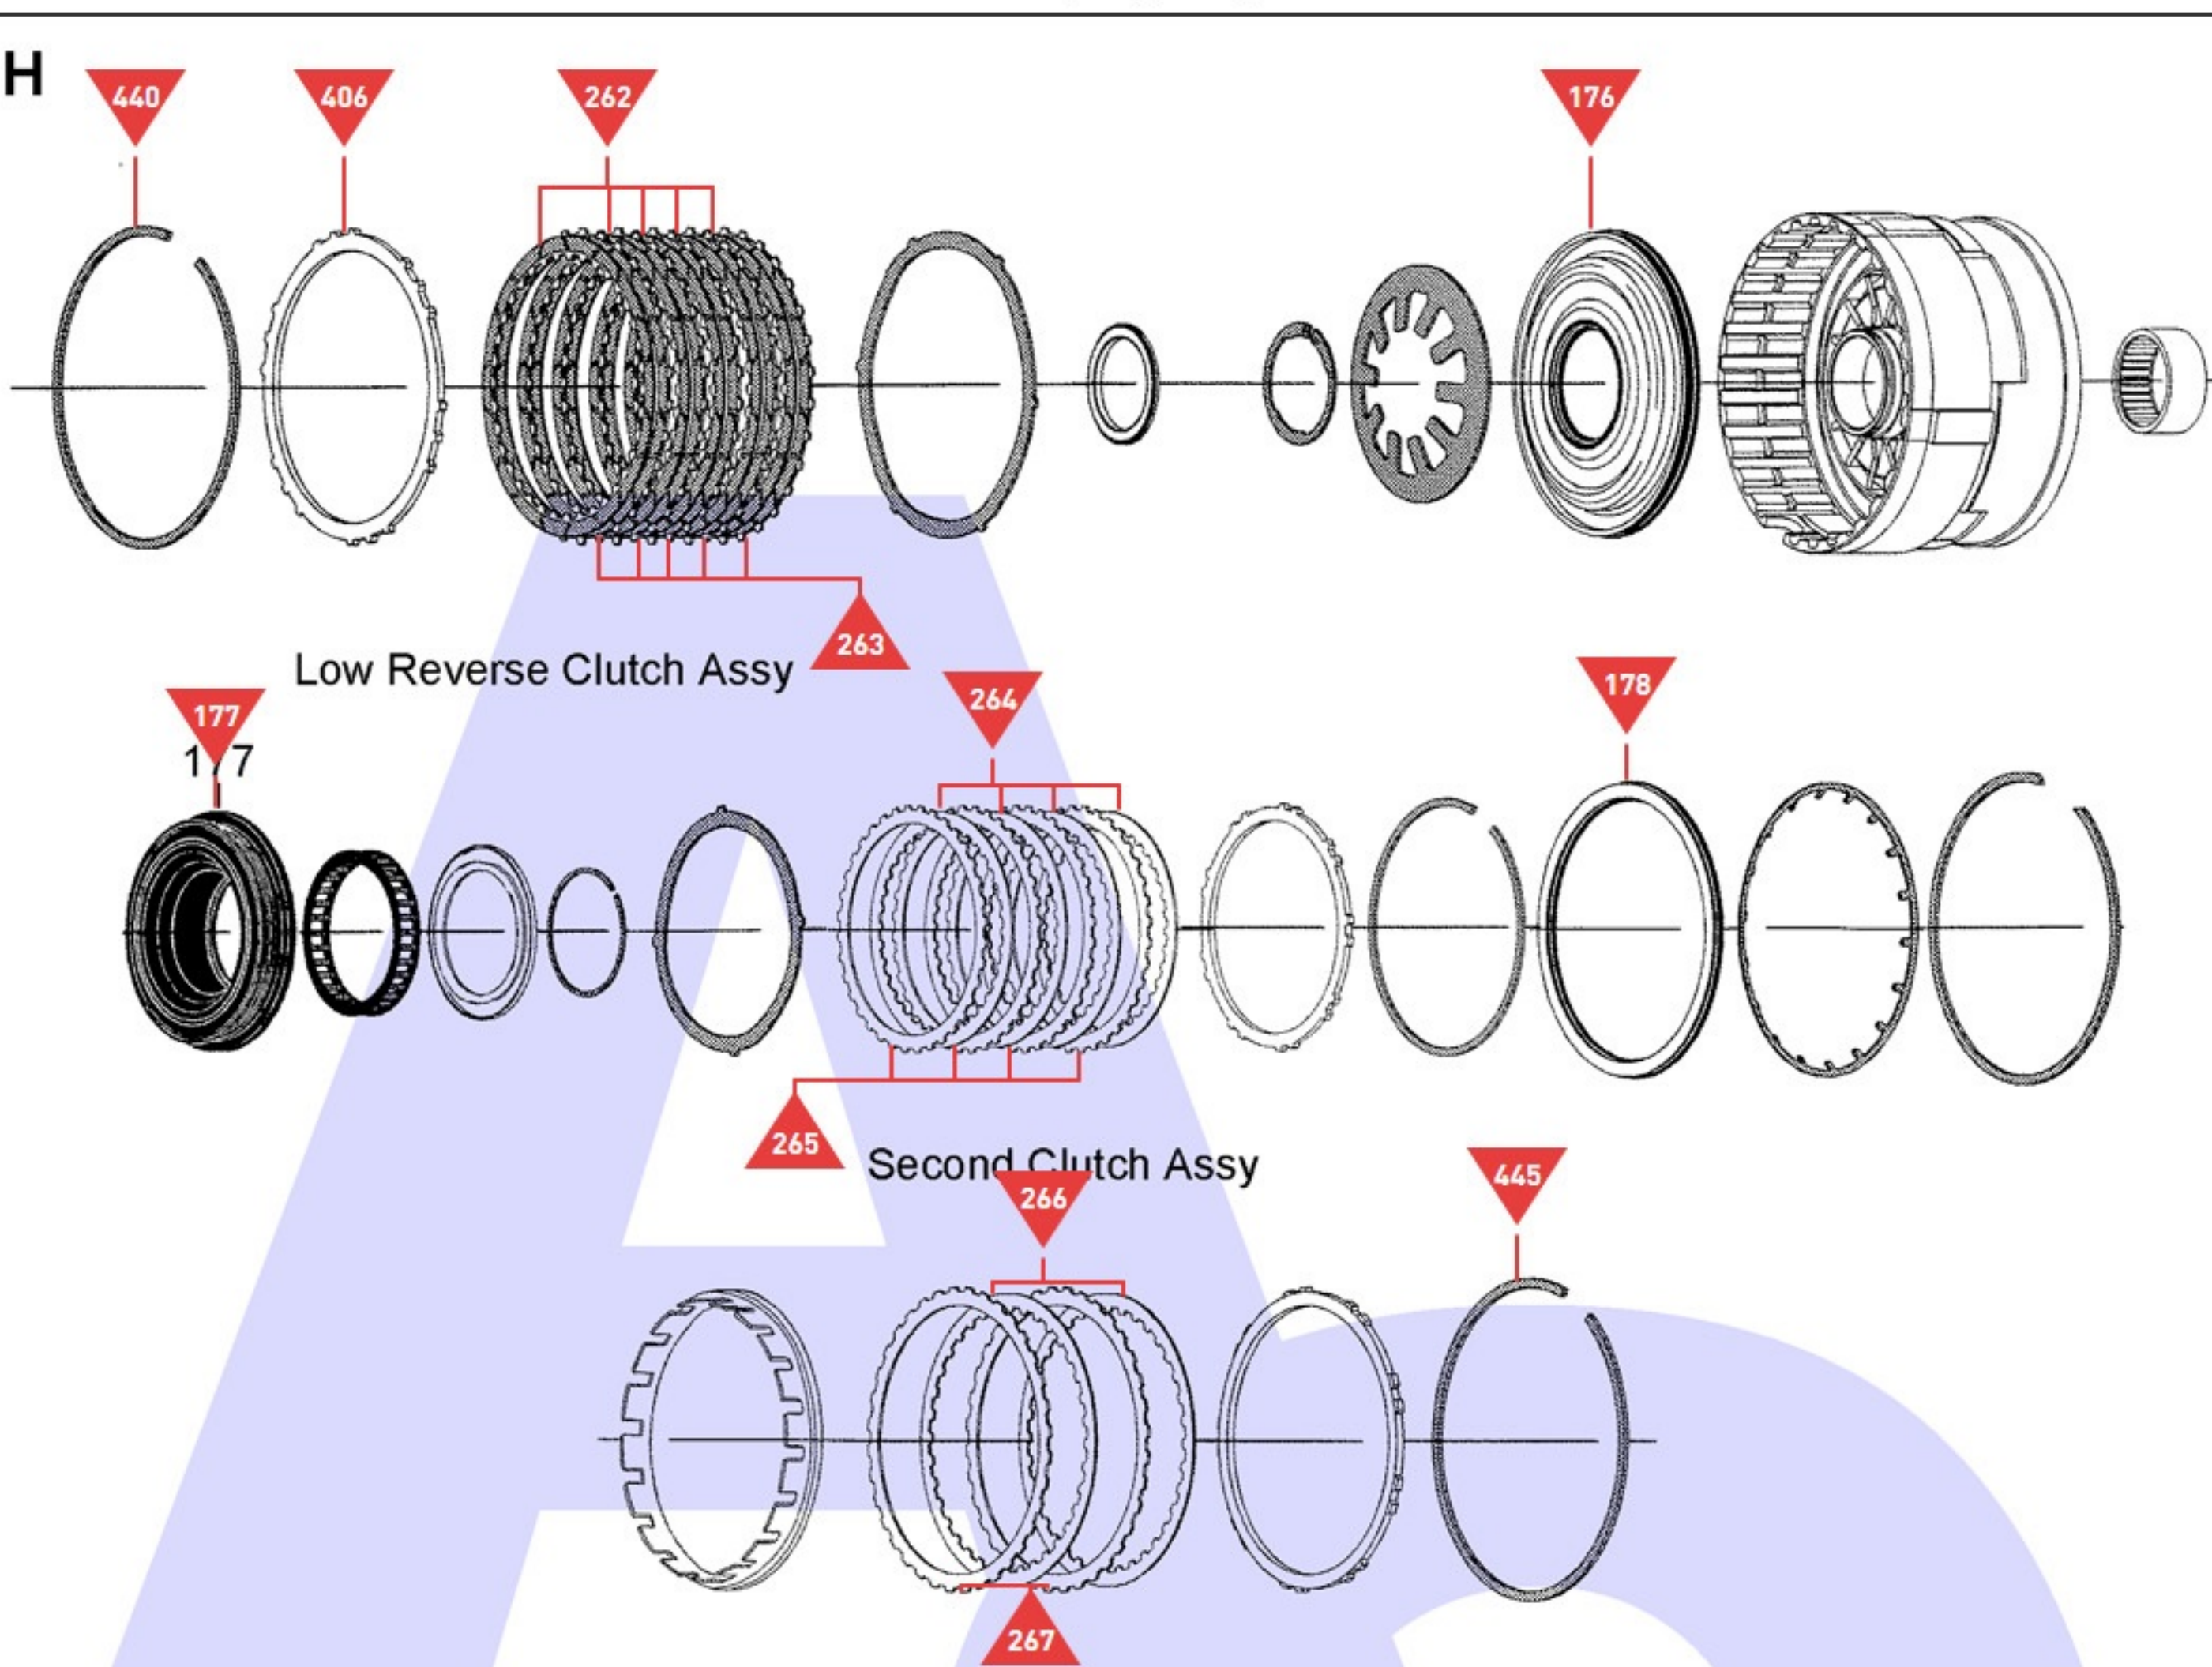


Low Reverse Clutch Assy

Second Clutch Assy

Second Coast Clutch Assy (Not Used on 4L40E)

J

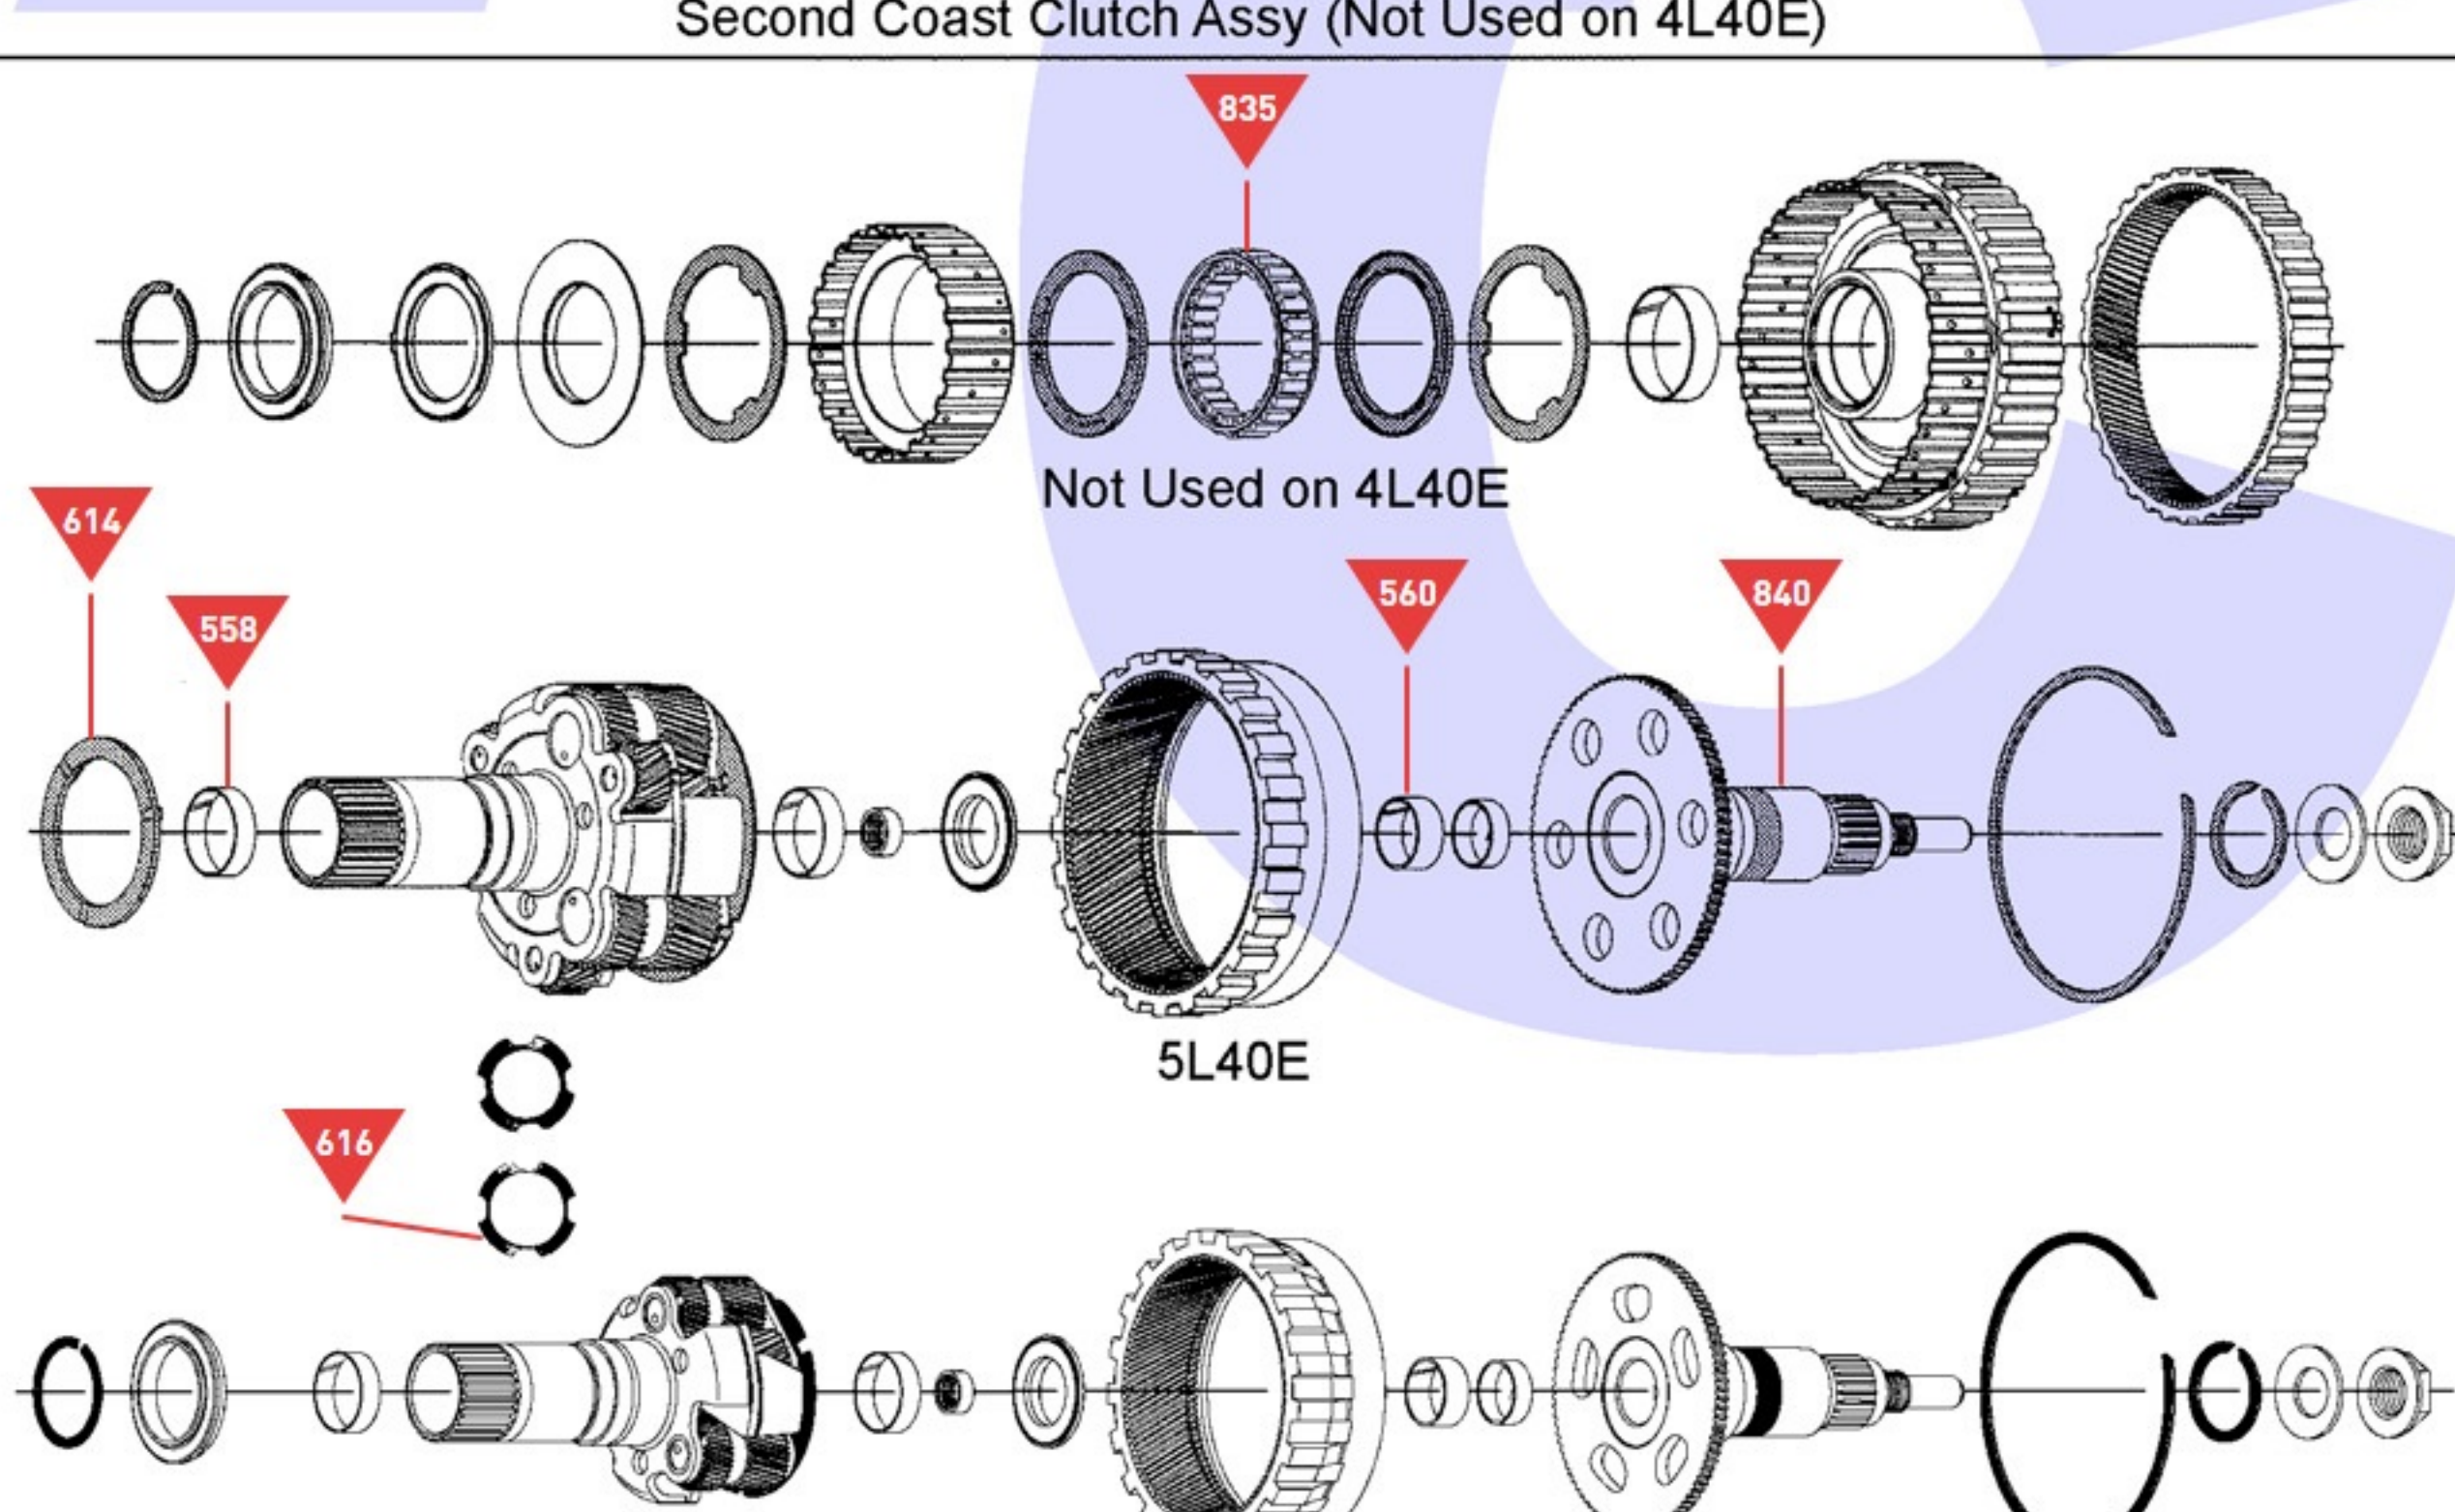


5L40E

4L40E

Second Sprag & Planetary Assy

K

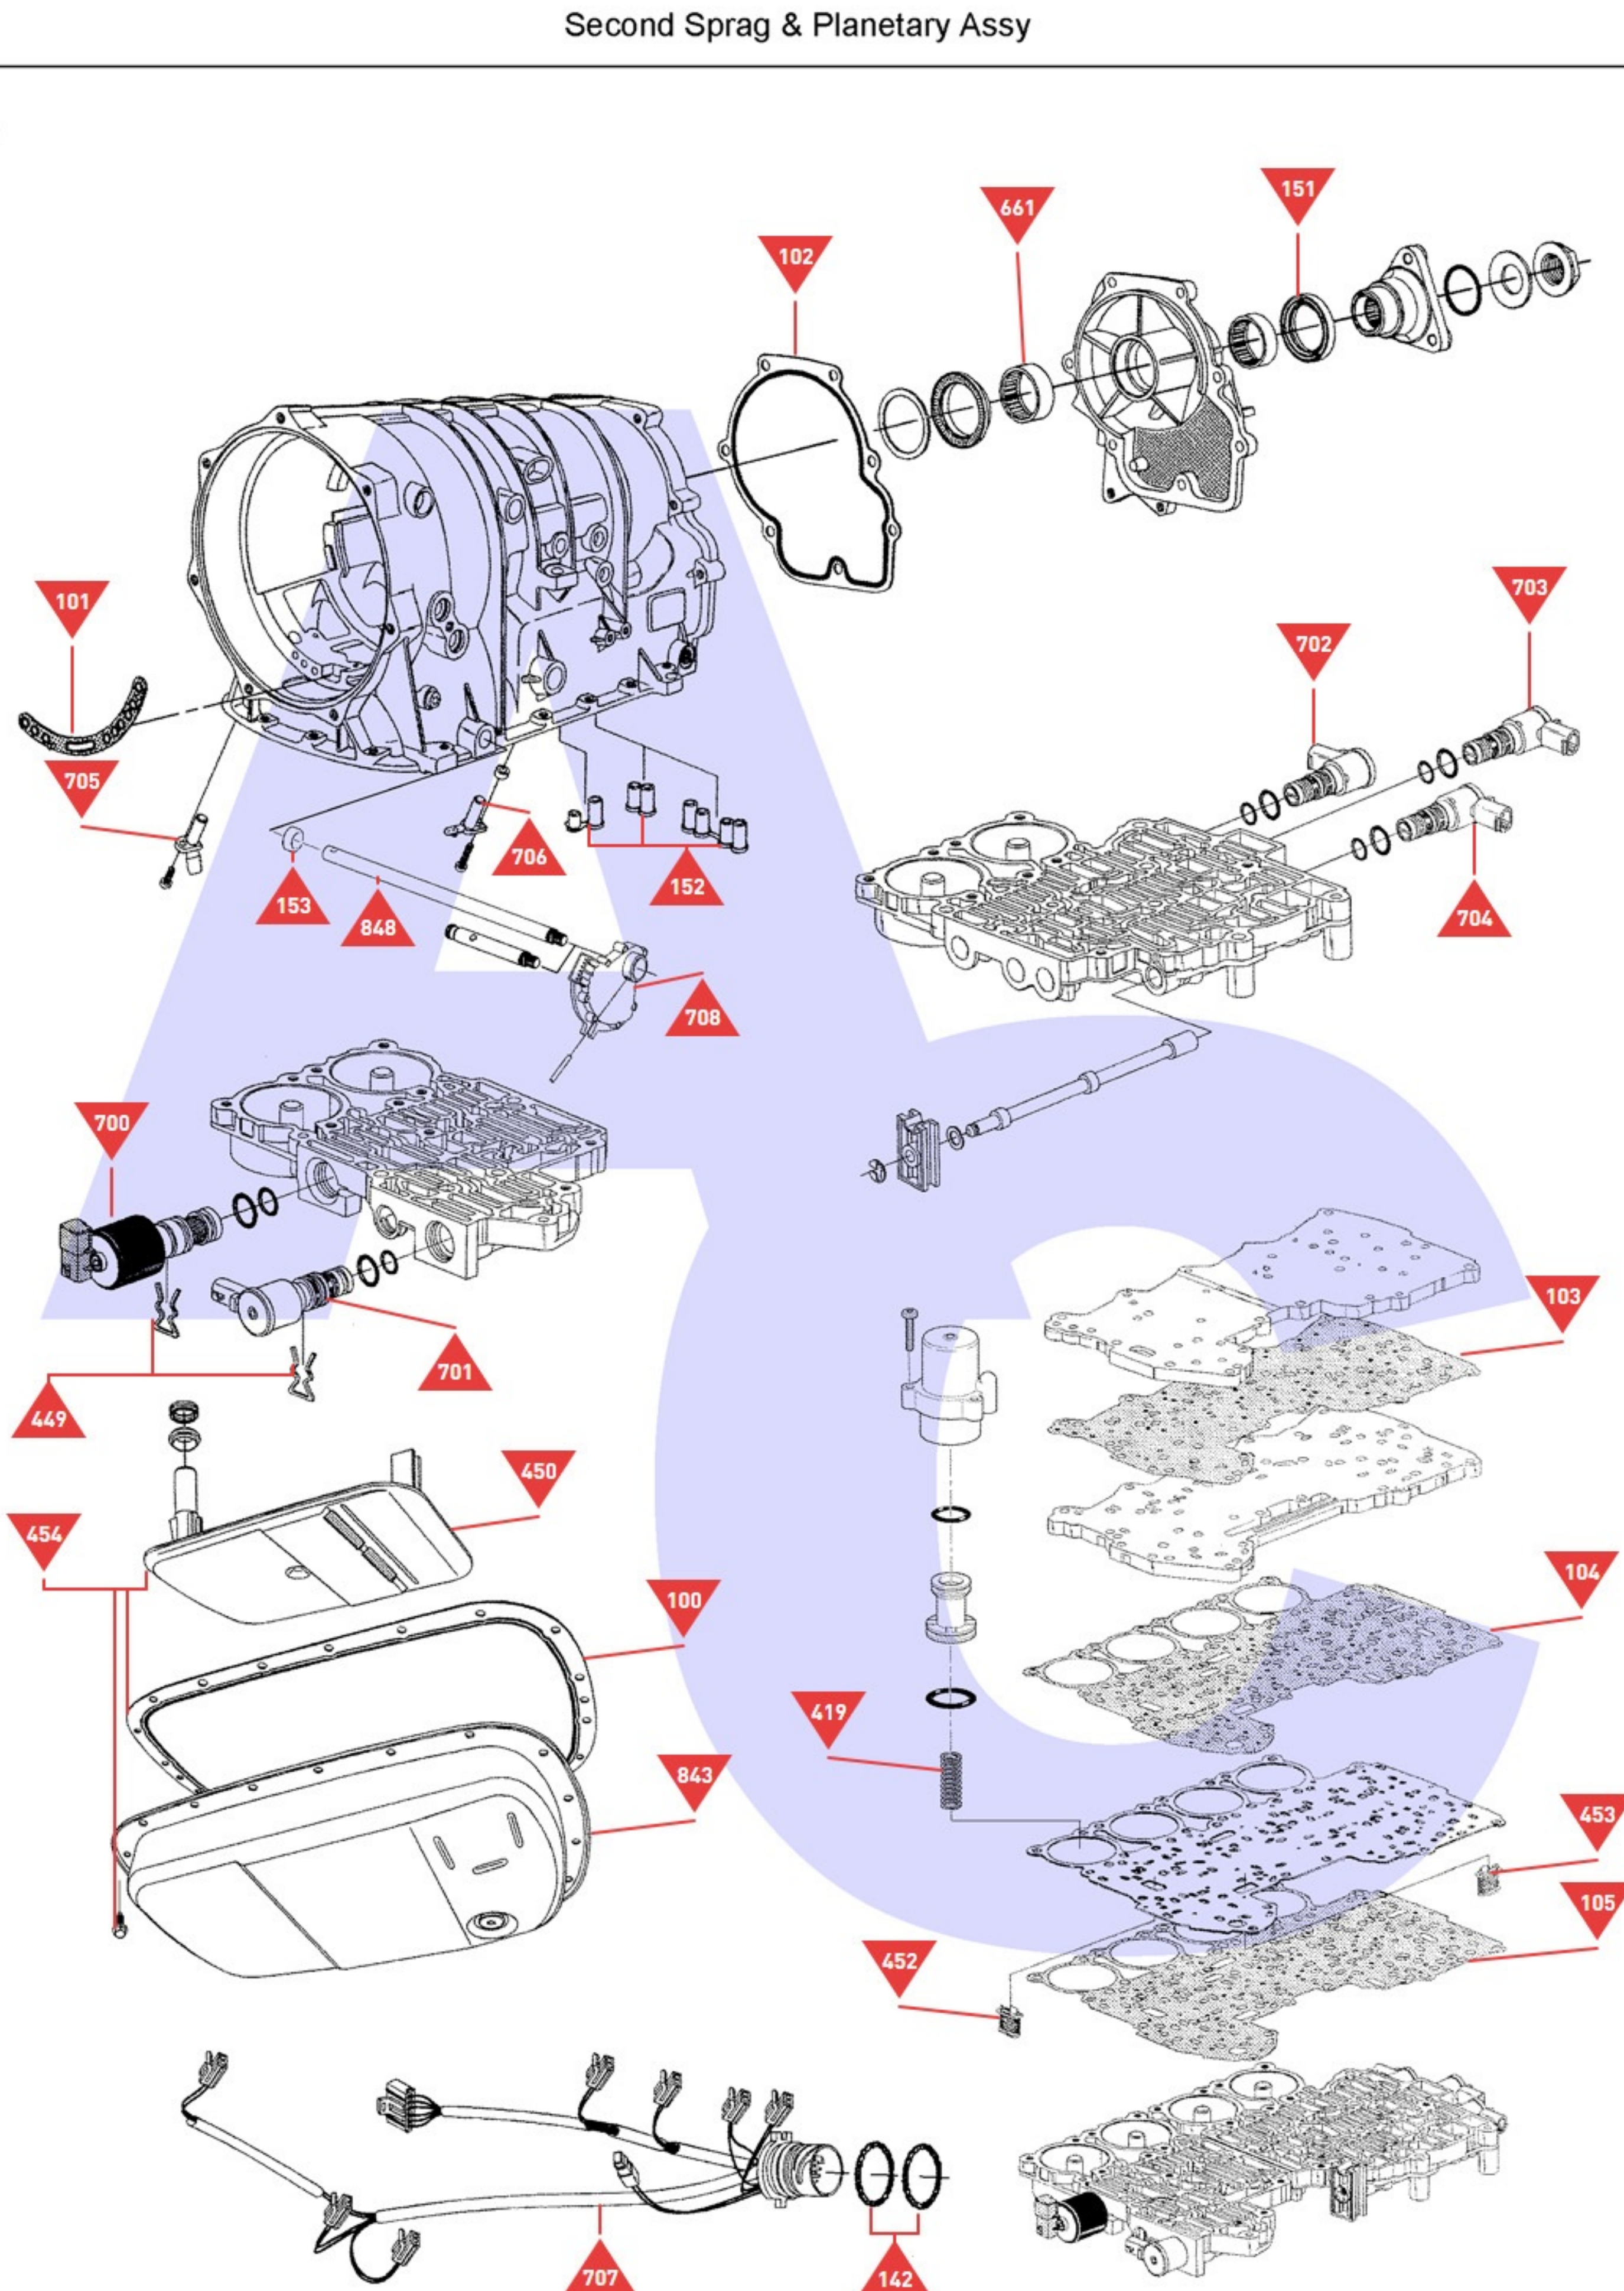

Casing, Valve Body & Electrical Components